Lowel Lobo & Lobo Arm Instructions

Warnings

These mounting accessories are for professional use.

Care should be exercised to avoid damage and personal injury.

Avoid mounting equipment when people are directly below. Make certain accessories are properly secured.


Do not use flammable materials close to lights.




Use

The Lobo positions the Lobo Arm, conventional flags, umbrellas, etc. on stand tops or shafts.

- **A.** One knob **A** locks all pivoting, panning and extending movements. This saves adjustment time but requires that one hand support the Lobo Arm until the knob has been fully tightened.
- **B.** Opening **B** fits on the top or any part of most stands and pipes and clamps up to 1-1/4" (31 cm) in diameter.
- **C.** Opening **C** accepts the Lobo Arm.
- **D.** Opening **D** can be used with conventional flags and accessories of 1/8" (3.8cm) in diameter.

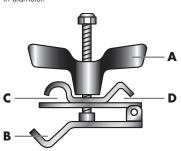

- Attach the Lobo to the stand 1 and leave the knob A loose.
- Insert the Lobo Arm **2** into opening **C** while pressing down on opposite side **D**.
- Tighten knob **A** to lock .
- To remove or adjust Lobo Arm, twist arm.
- The Lobo can be used on the stud of the Tota-clamp, Space-clamp or with the Lowel Interlink (with or without a Lowel Grip).
- Lobo can also hold the DP Frame.

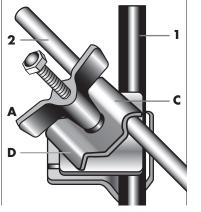

Lowel-Light Manufacturing, Inc.

90 Oser Avenue, Hauppauge, N.Y. 11788

Call: 800-645-2522 or 631-273-2500

Web: www.lowel.com **E-mail:** info@lowel.com

